



VILPE Sense Humidity Control User Interface

- Settings, log out, front page
- Choose a location
- Outdoor air RH level
- Structures RH level
- Roof fan rotation speed
- Create new group / add new device
- Search
- Settings (only for admin users)
- Mold index
- Conditions
- History (only for admin users)
- Refresh
- Choose time period
- Roof fan rotation speed
- Choose sensors/conditions
- Last update
- Sensors
- Temperature
- RH-levels
- Calendar

Settings for admin users

The screenshot shows the VILPE web interface for device settings. The top navigation bar includes a menu icon, the VILPE logo, and a search icon. The main content area is titled 'Device settings' and contains several sections:

- Device settings:** Includes 'Identifier' (with callout 21) and 'Location'.
- Transmitters and alerts:** Includes 'Set mold index alert' (with callout 22), 'P405 Controlling indoor transmitter', and 'P405 Controlling outdoor transmitter'.
- Change control roles:** Includes 'Owner' (with callout 23) and 'example@example.com'.
- Users:** Includes 'Users' (with callout 24) and three 'example@example.com' entries.
- Public link:** Includes 'Public link' (with callout 25) and a text input field containing 'vili-files.s3-website-'.

Each section has a 'Copy to clipboard' link at the bottom.

21. Choose location name

22. Choose sensor names and set alarm values

23. Change device's admin user

24. Add and remove users

25. Sharable link to data collected by the device (no registration)